



## BHi 001-IZM

9/90 AWA 123-985

### Einbau Bereithilfsschalter

Adaptation du contact prêt-à-fermer

Adaptation of ready-to-close contact

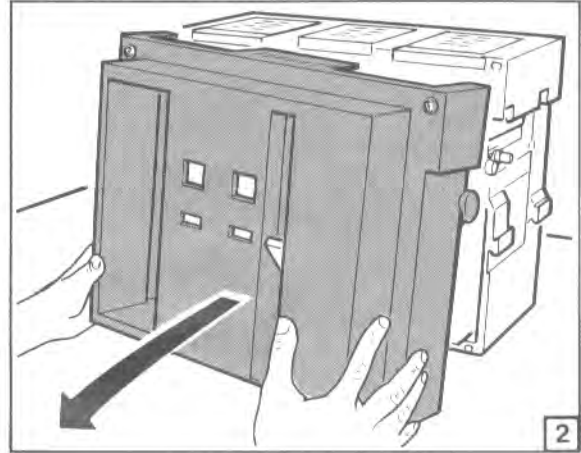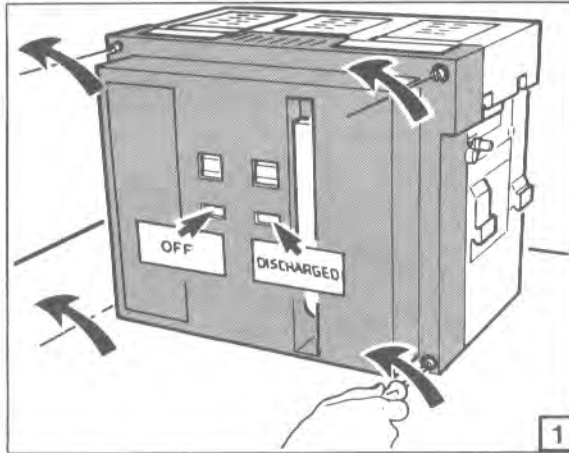

Normalhilfsschalter NHi 004 zuerst ausbauen  
Si vous avez l'option, démontez les contacts auxiliaires  
In case of existing auxiliary switches, first remove them

