


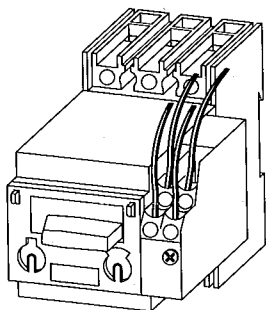


ZMR-...-PKZ2


8/93 AWA 128-1228



1

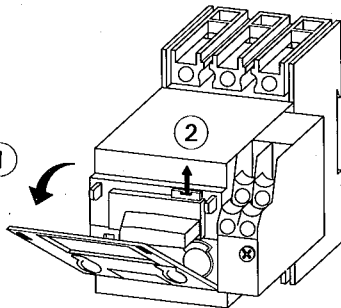


2

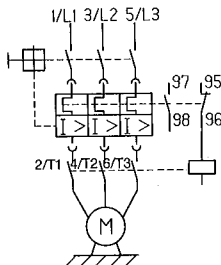

NOTE: Connect N.C. auxiliary contact 95-96 in series with the contactor coil circuit to de-energize the contactor in the event of an overload. N.O. auxiliary contact 97-98 can be used for signalling purposes. Refer to wiring diagram on this sheet.


 
RESET/Réarmement




Auto „ohne manuelle Rückstellung“*
auto "without manual reset"
automatique «sans réarmement manuel»*

Hand „manuelle Rückstellung“
hand "manual reset"
manuel «réarmement manuel»

in Position H: reset
in position H: reset
en position H: réarmement

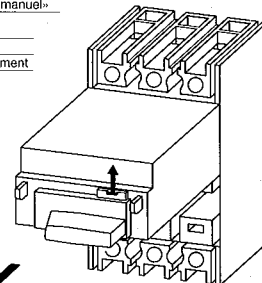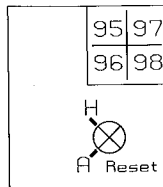

3

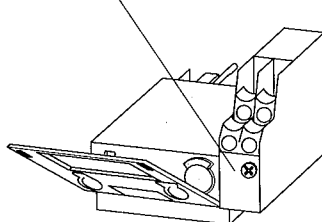

Bei automatischer Rückstellung kann der Motor automatisch wieder anlaufen. Dieser Wiederanlauf kann zu Personen- und Sachschäden führen.



With automatic reset the motor may start automatically. This restarting can become dangerous.



Dans le cas de réarmement automatique, le moteur peut démarrer automatiquement. Ce redémarrage peut devenir dangereux.

