


**Aufstellungsanweisung
Installation Instructions
Notice de montage**

AWA 34-333 (7/83)

**K 95
K 185
K 300**





h-K...

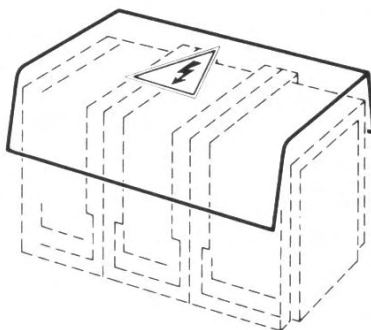

K 95

35-95 mm²
2 x 35 mm²
⊗ ◊ Cu + Al

AWG 2-00
○ ◊ Cu + Al

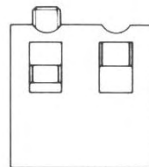





4 x 16 x 0,8
6 x 16 x 0,8
▨ Cu

For Klockner Moeller Sales and Support call KMparts.com (866) 595-9616

K 185

50-185 mm²
 2 x 50-95 mm²
 ○◇ Cu + Al

AWG 0-MCM 400
 ○◇ Cu + Al

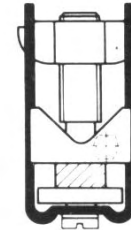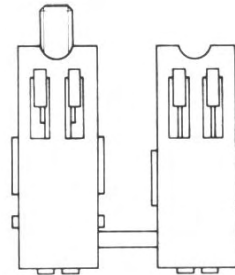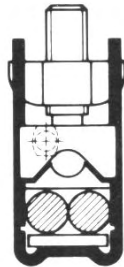
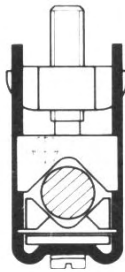


4 x 16 x 0,8
 6 x 16 x 0,8
 10 x 16 x 0,8
 □ Cu

K 300

120-300 mm²
 ○◇ Cu + Al




MCM 250-500
 ○◇ Cu + Al

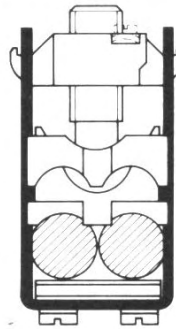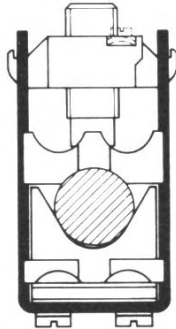

2 x 240 mm²
 ○◇ Cu + Al
 2 x MCM 500
 ○◇ Cu + Al

2 x 120-185 mm²
 ○◇ Cu + Al

2 x MCM 250-400
 ○◇ Cu + Al

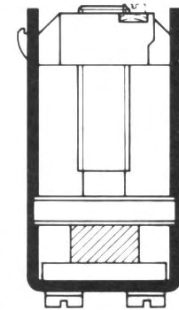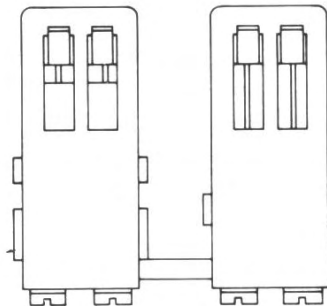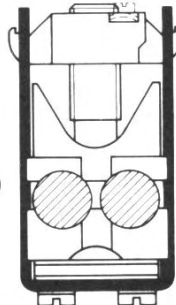

11 x 21 x 1
 2 x 11 x 21 x 1
 □ Cu