


7/94 AWA 123-1251

## FA 40(4)-IZM


Montage der Frontanschlüsse, Festeinbauswitcher

Mounting of front connectors, Fixed breaker


Montage des prises avant, Appareil fixe

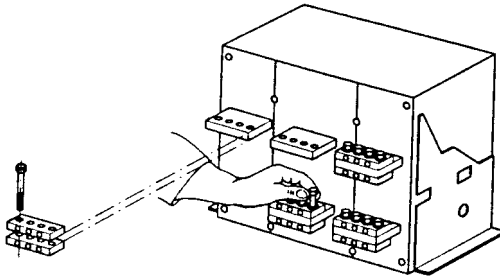


Anschlußblöcke anschrauben  
Fix the connecting blocks  
Fixez les blocs

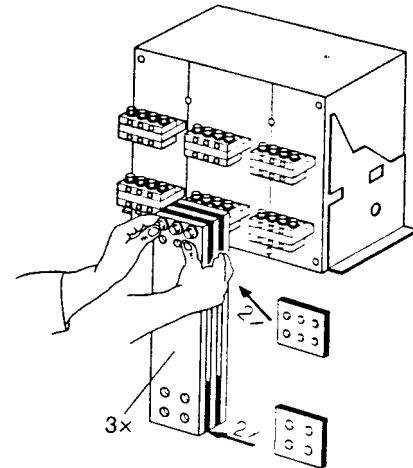

Anschrauben  
Screw  
Vissez

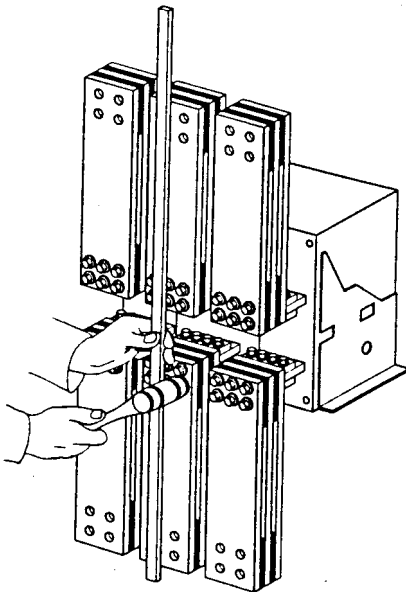


Ausrichten  
Position the front connectors  
Ajustez les prises avant

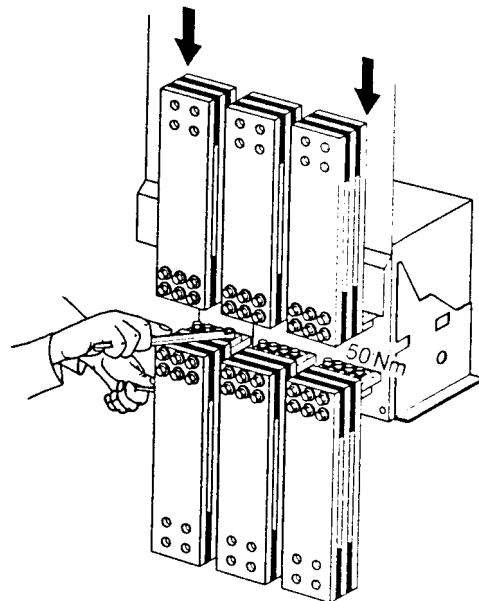


Schrauben festziehen  
Fix the screws  
Serrez les vis

Isolierplatte einstecken  
Slide the screen  
Glissez l'écran


**Montage der Frontanschlüsse, Ausfahreinheit**  
**Mounting of front connectors, Drawable unit**  
**Montage des prises avant, Appareil debrochable**

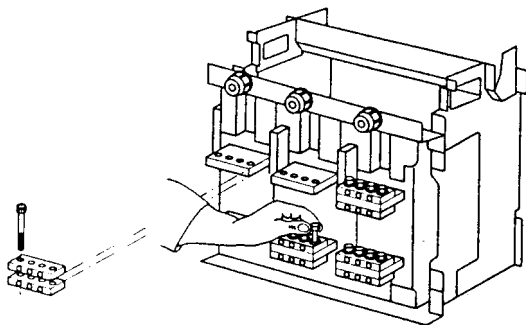


Anschlußblöcke anschrauben  
Fix the connecting blocks  
Fixez les blocs

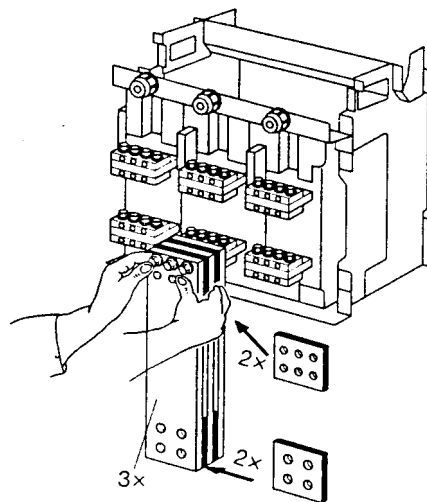

Anschrauben  
Screw  
Vissez

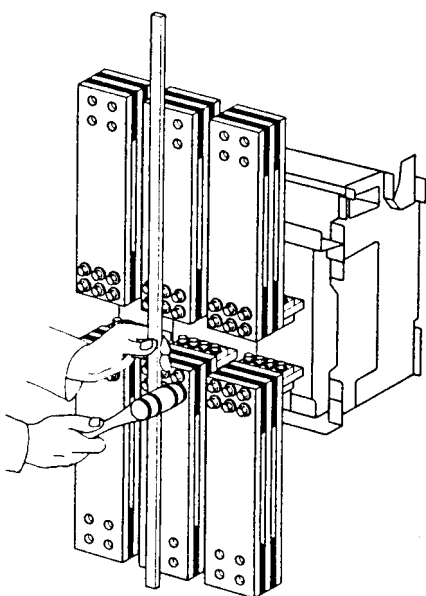

Ausrichten  
Position the front connectors  
Ajustez les prises avant

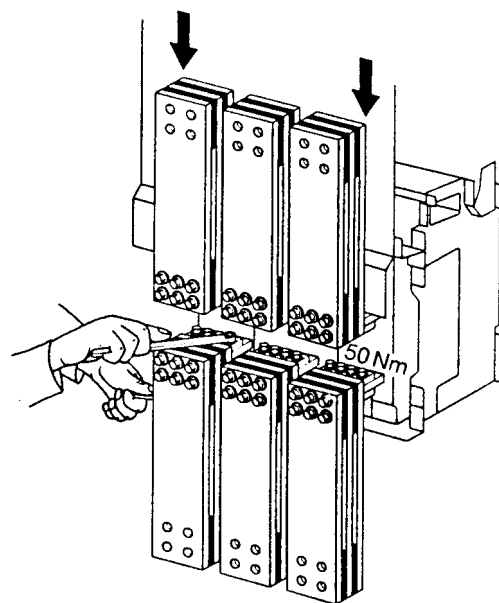

Schrauben festziehen  
Fix the screws  
Serrez les vis

Isolierplatte einstecken  
Slide the screen  
Glissez l'écran