


7/94 AWA 123-1251

FA 40(4)-IZM


Montage der Frontanschlüsse, Festeinbauswitcher

Mounting of front connectors, Fixed breaker


Montage des prises avant, Appareil fixe

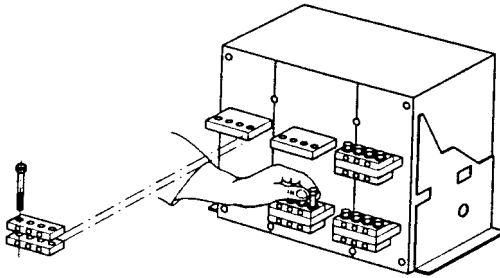


Anschlußblöcke anschrauben
Fix the connecting blocks
Fixez les blocs

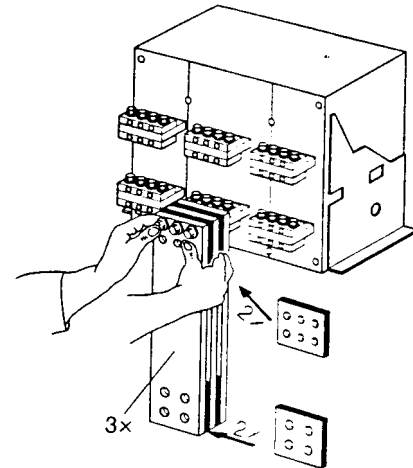

Anschrauben
Screw
Vissez

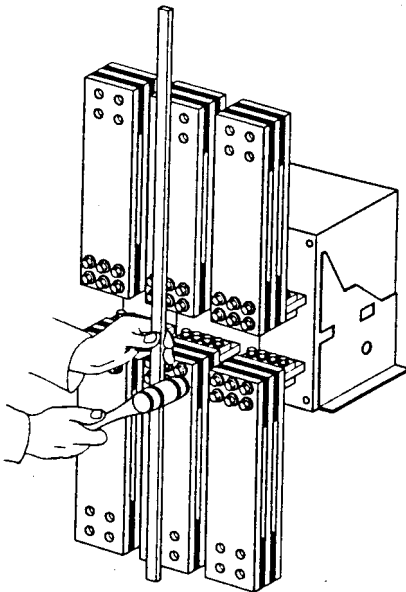


Ausrichten
Position the front connectors
Ajustez les prises avant

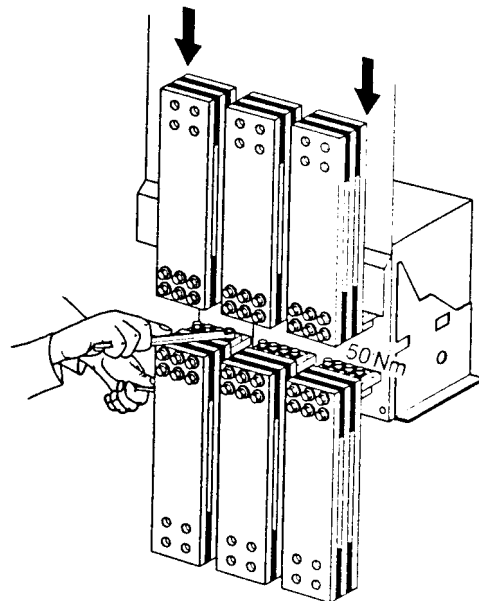


Schrauben festziehen
Fix the screws
Serrez les vis

Isolierplatte einstecken
Slide the screen
Glissez l'écran


Montage der Frontanschlüsse, Ausfahreinheit
Mounting of front connectors, Drawable unit
Montage des prises avant, Appareil debrochable

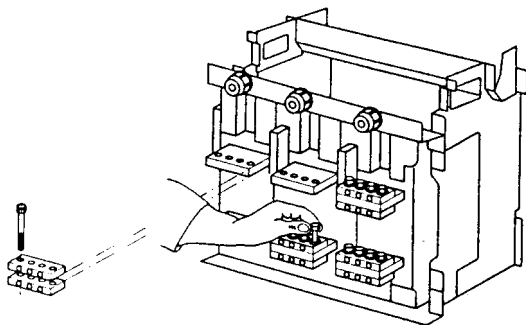


Anschlußblöcke anschrauben
Fix the connecting blocks
Fixez les blocs

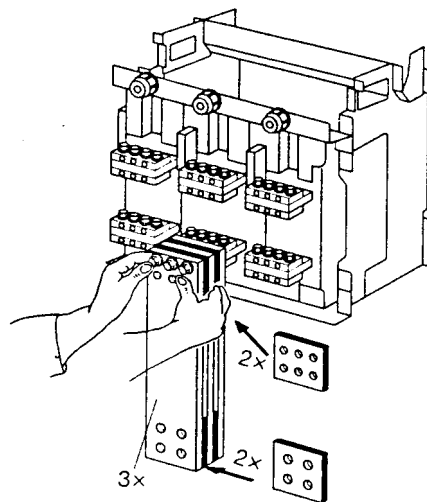

Anschrauben
Screw
Vissez

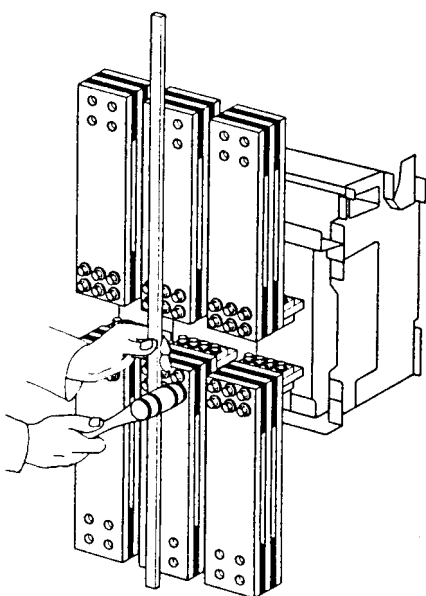

Ausrichten
Position the front connectors
Ajustez les prises avant

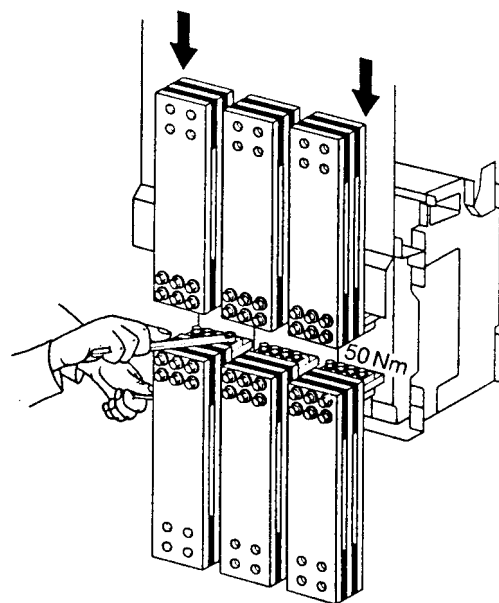

Schrauben festziehen
Fix the screws
Serrez les vis

Isolierplatte einstecken
Slide the screen
Glissez l'écran